


# iSWEEP Chassis Reinforcement Parts Manual

## 【How to use the supplied washer】

Thank you for your purchase of our iSWEEP product.

**Keep this manual**

Please Note: When mounting the iSWEEP front lower arm bar, if your sub-frame is the same shape as the following photo, be sure to use the supplied washer. If installation is performed without using the supplied washer, there is a possibility that the attached M8 bolt supporting the center is loosened by vibration during travel.

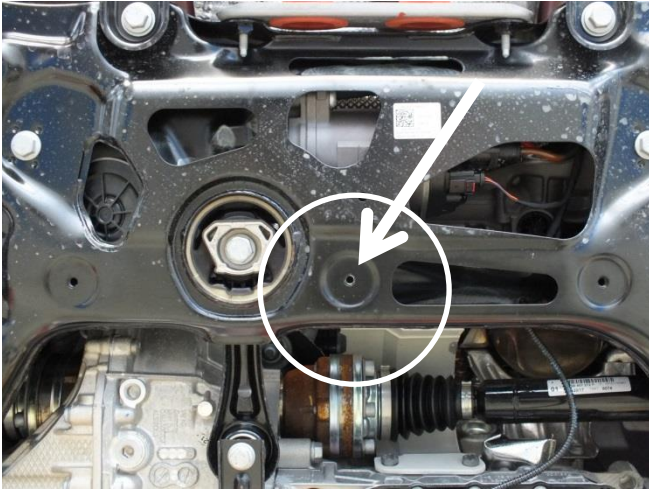

1. Please check the shape of the sub-frame where the arrow is pointing. If your sub-frame looks the same as in the photo, you will need to add the supplied washer.

If the photo of the sub-frame is the same design as the one you are working on then you **MUST USE** the supplied washer.



2. Place the washer between the sub-frame and our iSweep lower arm bar as shown in the photo. Make sure the washer sits in the indentation.
3. Use the supplied M8 bolt and attach it to the center stay, temporarily. Make sure the washer is also in place.
4. Secure the bolt to the iSWEEP front lower arm and follow the installation instructions, tighten to the specified torque below

■ Specified Torque > 15Nm

