



【iSWEEP Rear Diffuser DTM Style】


VW GOLF7 R

◇ Parts List

1. Rear Diffuser × 1
2. M6 Truss Head Screw × 2
3. M6 Flange Nut × 2

Thank you for purchasing iSWEEP products. This instruction manual provides necessary information for proper installation to prevent defects, malfunctions, and accidents from occurring. Please read and acknowledge all procedures before beginning installation. iSWEEP is not responsible for any injuries or death caused by the misuse or negligence of this manual and product.

【Installation Instructions】

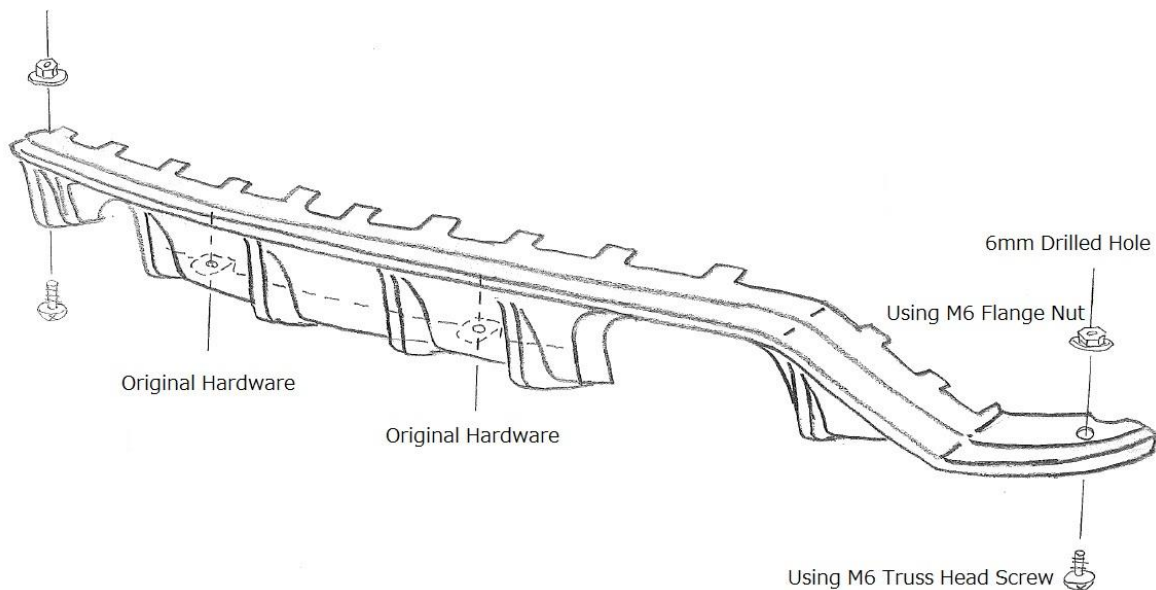

1. This product should be taken to a body shop or paint refinisher and be painted by a qualified automotive paint specialist.
2. Remove the original rear diffuser. Remove the clip nut and screw that is attached to the original rear diffuser and reuse them to the iSWEEP Rear Diffuser at the same position.
3. Install the iSWEEP Rear Diffuser in the same way as an original.
4. Make a mark where you will need to drill the two (Left and Right both end side) holes that will connect the iSWEEP Rear Diffuser and the original bumper using the hole of the iSWEEP Rear Diffuser side. Then drill two 6mm holes where the marks were made. Last, use the included 6mm Truss bolt and nut to secure the iSWEEP Rear Diffuser to the bumper.